

## # 3819: Checking Available Memory

---

Since Release 3.2.51 the available space for certain folders is monitored on both. server and client:

### Server:

- ..\Onyx3Server\OnyxDB\
- ..\Onyx3Server\Pictures\

### Client:

- ..\%Temp%
- ..\Windows\

On program start and actions like add images,import containers and clone findings the available space is checked. If less than 100MByte of space is remaining, a **warning** is returned, if less than 10MByte is remaining, an **error message** is displayed.

The messages can be suppressed by INI entry:

```
[Application]
SkipRemainingSpaceMessage=1
```

From:  
<https://onyxwiki.net/> - [OnyxCeph<sup>3</sup>™ Wiki]

Permanent link:  
<https://onyxwiki.net/doku.php?id=en:3819>

Last update: **2017/06/13 17:47**

